

## M16000 Multi Arcade



Congratulations on purchasing the M16000 Multi Arcade, the best quality Multi Arcade on the market today. This manual will explain everything you need to know about your new M16000 Multi Arcade, and what it does not explain you will have fun exploring and discovering on your own!



Your M16000 is built to last for years of fun, has many features not available in any other Multi Arcades and is for home use only. It is coinless and should not be converted to accept coins or for gambling purposes. The manufacturer of the M16000 is not liable for damages to the unit or legal ramifications in the event that this unit is used for other than intended purposes.

To avoid serious harm to your machine:

- DO NOT unplug your machine while it is on.
- DO NOT plug any device to this unit that is connected to the internet.
- DO NOT alter monitor setting or any settings on the unit.

## INDEX

Customized M16000 Units

Features & Functions

Specifications

Operating instructions

    Turning On

    Turning Off

    Savings Games to Favorites

    Choose Favorites

    Delete Game from Favorites

    Backing Out of a Game and Game System

    Synching with Bluetooth

Care & Maintenance

M16000 can be fully customized including:

Vinyl images

LED button colors

Speakers

...and MORE.

To contact us regarding creating a completely customized M16000 including cocktail style and full-size arcade style, please contact:

John Dillen

Email: [Jdillen80@gmail.com](mailto:Jdillen80@gmail.com)

## FEATURES, FUNCTIONS & ACCESSORIES

### FEATURES

Single player functions

32" x 19" x 13", approximately 65 lbs.

LED competition buttons and joystick

3 way speakers for HiFi stereo sound

LED lit marquee and adjustable backlighting with remote

Volume control

16,000 games with "Favorites List" option for all but Arcade Classic games

19" flat screen with sharp picture angle

53 second boot up time

29 game systems and a special Pinball section

185 Pinball games

Bluetooth 4.2 capable

3D Glasses for select games



 
FUNCTIONS & ACCESSORIES

 








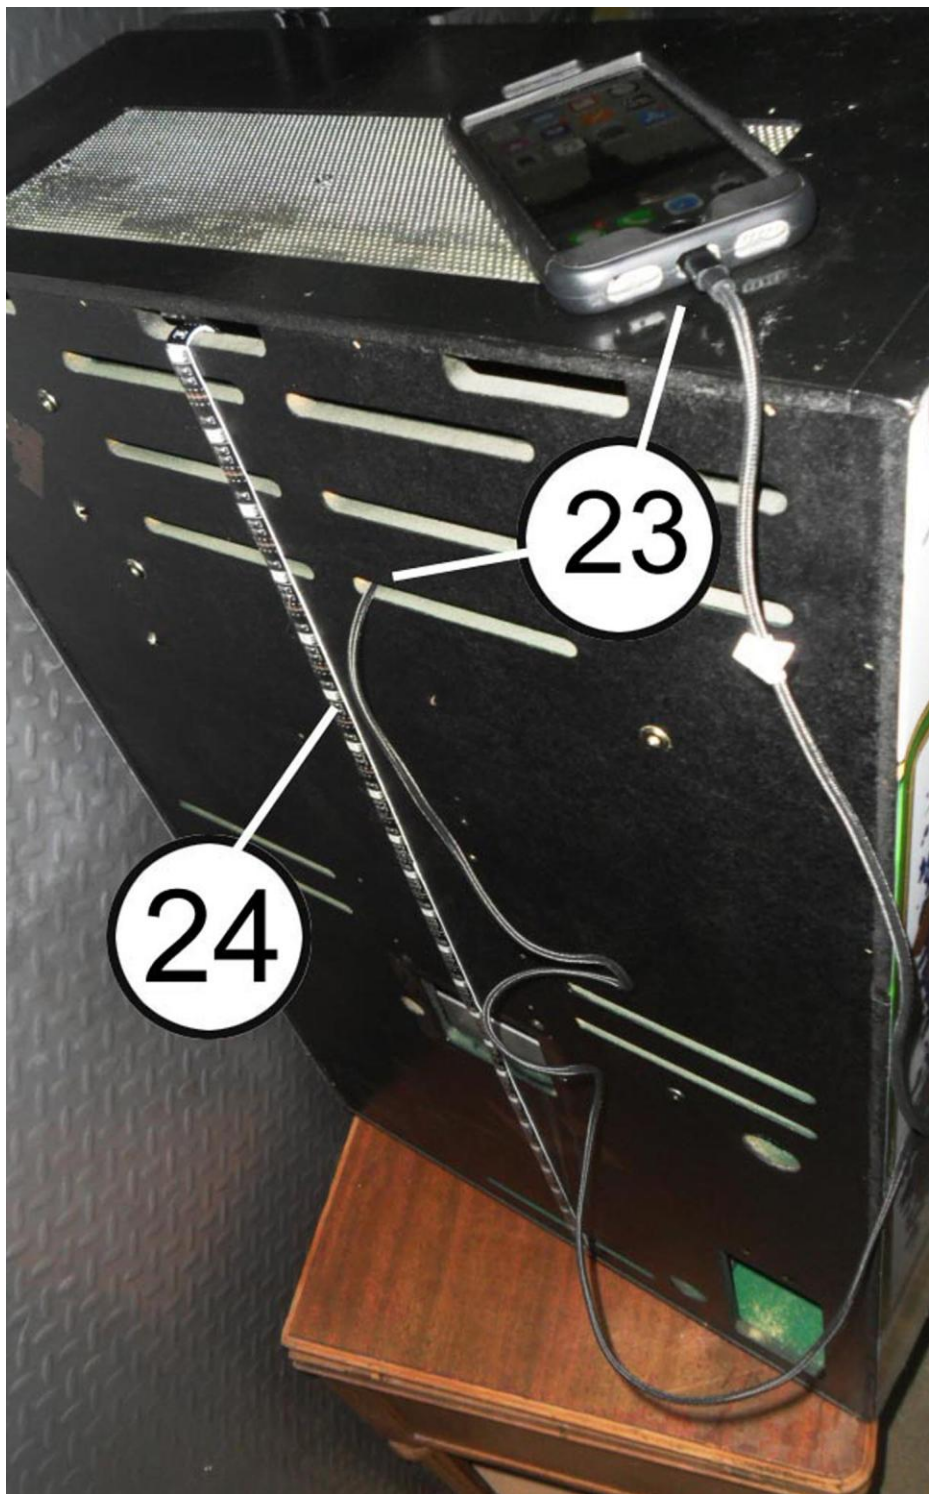

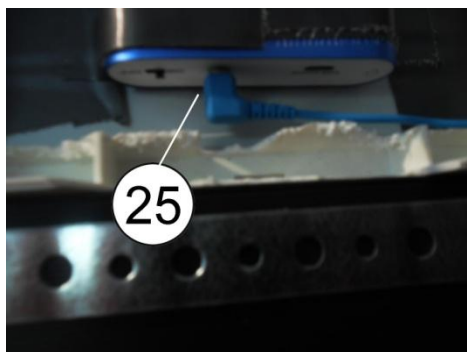

1	Arcade trim
2	Boss speakers 125 watts each , 100 amp to not damage speaker even at full volume.
3	Duel volume control.
5	LED Lit joystick for up, down, left, right controls
6	Backlit button for picking systems and games
7	Backlit button for game action control, varies by game
8	Backlit button for game action control, varies by game
9	Backlit button for game action control, varies by game
10	Backlit button for game action control, varies by game
11	Backlit button for game action control, varies by game
12	19" Flat Screen Monitor with MS response time and Lexan crystal-clear Plexiglas.
13	Virtual Pinball flipper controls – 185 games
14	Backlit LED Button for Player 1 / Start.
15	12 Colored Backlit Back Out / Shut Down button.
16	Backlit virtual coin insert button for coin op games with coin-drop sound.
17	Shooter accessory attachment hole – run Shooter wire through hole, plug inside.
18	Marque backlit with LED lighting for long life / easy replacement.
19	Custom retro style side vinyls.
20	Built-in carrying handles.
21	Hinged door lock.
22	System On/Off button.
23	Phone charging capability – run cable to inside of machine and plug in to charge phone.
24	Rear Backlight (20) LED Strip located on back of machine. Allows you to change backlighting to your specifications including color change, fading, blinking.
25	Bluetooth capable. Unplug to activate blue tooth.
26	Shooter accessory. Run cable through hole in door (17) and plug in.
27	Shooter holster attachment with adhesive backing.
28	Lock and key for upper hinged door lock.
29	Remote control for Rear Backlight LED Strip (24) located on back of machine. Allows you to change backlighting to your specifications including color change, fading, blinking.
30	3D Glasses for use with 3D games.

## Specifications

Dimensions	32" x 19" x 13"
Weight	Approx. 65 lbs
Power Usage	275 watt power supply, 4.3 watts in idle, 8.8 running
Monitor	19" flat screen with MS response time and Lexan crystal-clear Plexiglas. Clear front cover with dust guard seal.
Speakers	125 watt per speaker Boss, 100 watt amp
# of Games	16,000
# of Game Systems	29
Blue Tooth	4.2
Lighting Type	LED
Buttons	Tested for 1,000,000 click life. Zero delay for fastest response time possible.



## Operating Instructions

 
### Turning On

Step 1	If you will be using the Shooter attachment be sure to install the Shooter prior to turning on the machine by running the wire through the hole in the front right of machine and using the USB port located on the power unit inside machine. If you do not attach the Shooter prior to starting the machine it will not be read by the system and will not be useable.
Step 2	Turn on surge protector power strip inside unit.
Step 3	Push button (22) on right side of unit.

### Turning Off

Step 1	Push front backout button (15) and you will be asked if you would like to exit.
Step 2	Push button (1) to confirm / yes.
Step 3	Turn off surge protector power strip inside unit.

### How to Start Each System

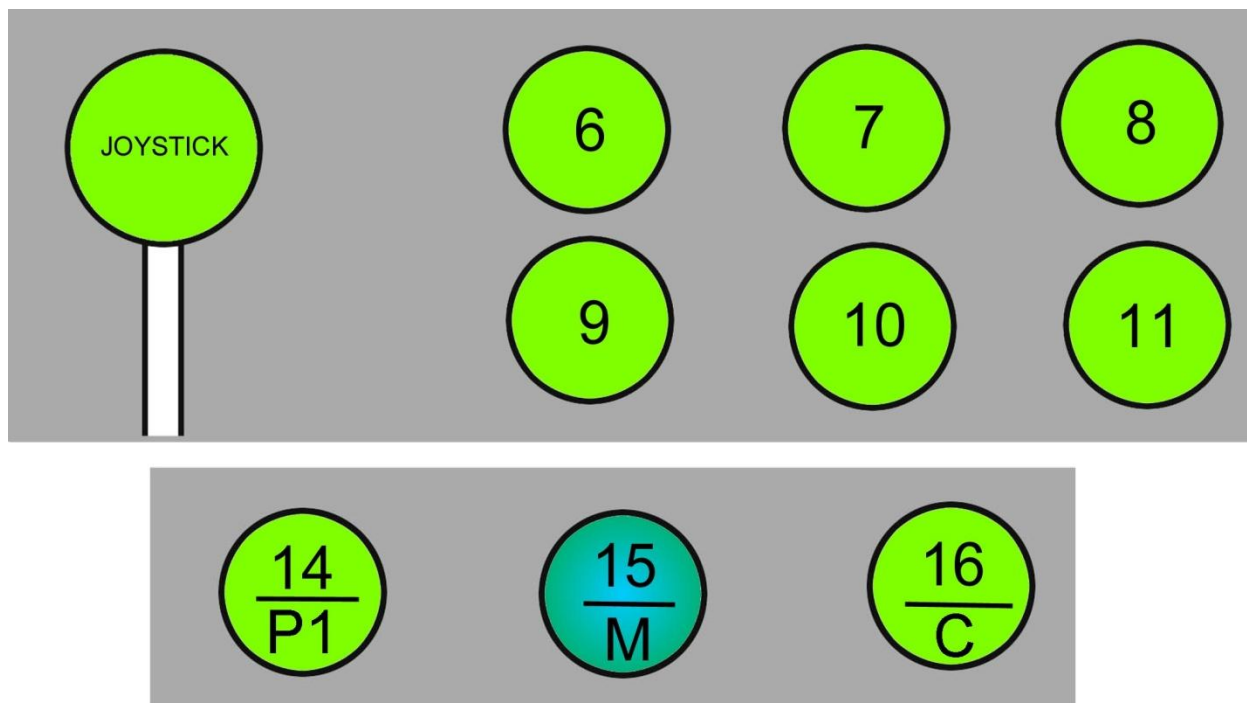

**14 / P1** – Player 1   **15 / M** – Exit to Main Menu Screen/Shut Down   **16 / C** – Coin

**TIP-** Hold Joystick to left 2 seconds to select games by their 1<sup>st</sup> letter.

### How to Start Each System

Arcade Classics Daphne Dice Pinball Neogeo SegaM2 PC Engine Zink	Press 6 to start the system Press 6 top pick a game Press 6 then 16 for credits Press 14 for Player 1
Atari 2900 Atari 5200	Press 6 to start the system Press 6 to pick a game Press 6 to start the game

Atari 7200 Atari 5200 Jaguar Collecovision Gameboy Gameboy Advance Gameboy Color Intellius Nintendo Nintendo 64 Playstation Sega Sega 32X Sega Dreamcast Sega Gamegear Sega Master Super Grafix Super Nintendo Turbo 16 Virtual Boy	Press 6 to start the system Press 6 to select game Press 6 to start game
Neogeo Pock	Press 6 to start the system Press 6 to select the game Press 7 to start the game

### Saving to Favorites

Step 1	When in system and game you want, press button 11.
Step 2	Screen prompts you to add to favorites, use joystick to highlight add to favorites, hit button 6 to add.

### Choose Favorites

Step 1	Repeat process but when prompted hit choose favorites.
--------	--

### Delete Game from Favorites Favorites

Step 1	Repeat process , once on game you want to delete hit button 11 again.
Step 2	Select Delete from Favorites, hit button 6.

### Backing out of a Games and Game Systems

Step 1	Press center front button (15) taking you out of games and into games list.
Step 2	Press button (15) once more to leave games list and enter systems list.

### Syncing to Bluetooth

Step 1	Unplug blue plug on inside top of door.
Step 2	The unit will say "Bluetooth Activated". Screen will say Aux when Bluetooth is plugged in.
Step 3	Synch with phone. Do not save it in phone if you want others to have access to Bluetooth.



## CARE & MAINTENANCE

Do not set liquids on machine. Any liquids will cause irreversible damage.

Clean vinyl sides with windex and cotton rag, or a damp cotton rag.

The monitor is protected by the outside glass and is surrounded with material that will keep dust off the actual monitor, so you will not need to clean the monitor itself. To clean the glass use a microfiber cloth to avoid scratches. DO NOT soak screen with cleaner or water, which may run down between the screen and the monitor and cause damage.